



***MOTOROLA***

V600  
GSM


***START HERE >***



# Welcome


---

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V600 GSM wireless phone.

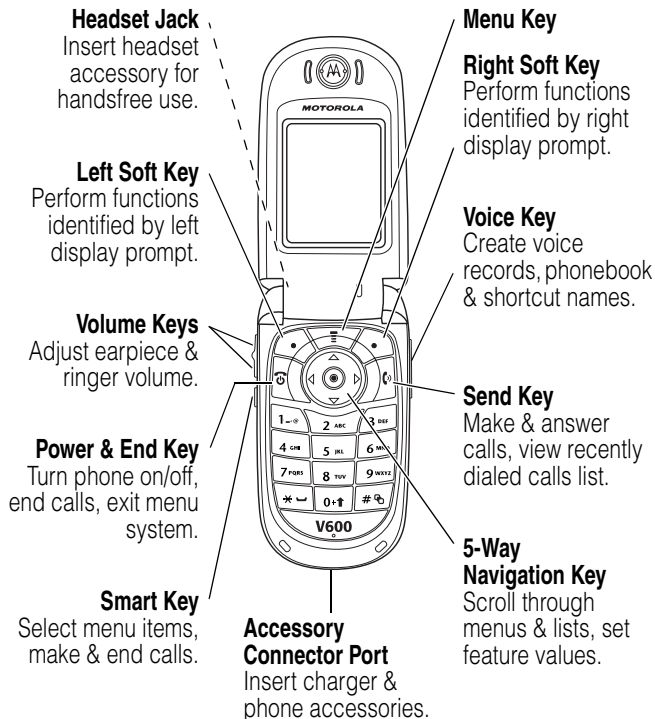

# Check It Out!

---

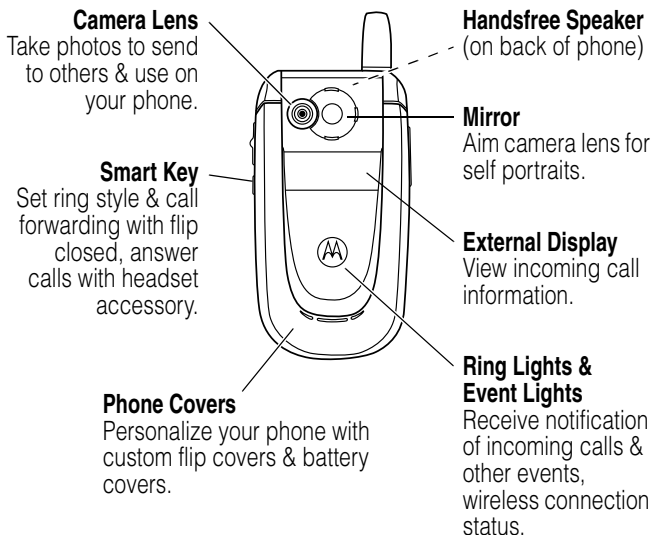

Feature	Description
<b>Take Photo</b>	Press <b>CAMERA</b> (📷) to activate the camera, point lens at subject, press <b>CAPTURE</b> (📷) to take a photo.
<b>Send Photo</b>	Send the photo to a phone number or email address: Press <b>STORE</b> (📷) > <b>Send In Message</b> .

Feature	Description
<b>Set Photo as Picture ID</b>	Assign a photo to a phonebook entry to enable picture caller ID:  > <b>Multimedia</b> > <b>Pictures</b> > <i>photo</i>  > <b>Apply As</b> > <b>Phonebook Entry</b>
<b>Send Multimedia Message</b>	Send a multimedia message with pictures, animations, sounds, and videos:  > <b>Messages</b> > <b>Create Message</b> > <b>New Multimedia Msg</b>
<b>Send Letter</b>	Send a multimedia letter:  > <b>Messages</b> > <b>Create Message</b> > <b>New Letter</b>
<b>Play Video Clip</b>	Play a video clip:  > <b>Multimedia</b> > <b>Videos</b> > <i>video clip</i>
<b>Wireless Connection</b>	Set up a Bluetooth <sup>®</sup> wireless connection to a headset accessory, car kit, or external device:  > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Handsfree</b> > <b>[Look For Devices]</b>
<b>Ring Lights</b>	Choose ring lights for incoming calls:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Ring Lights</b>
<b>Event Lights</b>	Activate event lights for incoming text and voicemail messages, alarms, and other events:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Event Lights</b>



Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196

1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com) (United States)  
[www.motorola.ca](http://www.motorola.ca) (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual number: 6809467A24-A

# Contents

---

<b>Getting Started</b> .....	8
About This Guide .....	8
Installing the SIM Card .....	9
Battery Use .....	10
Installing the Battery .....	12
Charging the Battery .....	13
Turning Your Phone On .....	14
Adjusting Volume .....	15
Making a Call .....	15
Answering a Call .....	16
Viewing Your Phone Number .....	16
<b>Highlight Features</b> .....	17
Taking and Sending a Photo .....	17
Sending a Multimedia Message .....	19
Receiving a Multimedia Message .....	21
Playing Video Clips .....	22
Using a Bluetooth® Wireless Connection .....	23
Using Ring Lights .....	24
Using Event Lights .....	25
Changing Phone Covers .....	25
<b>Learning to Use Your Phone</b> .....	27
Using the Display .....	27
Using the 5-Way Navigation Key .....	32
Using Menus .....	33
Entering Text .....	36
Using the Smart Key .....	46
Using the External Display .....	46
Using the Handsfree Speaker .....	47

Changing a Code, PIN, or Password . . . . .	48
Locking and Unlocking Your Phone . . . . .	49
If You Forget a Code, PIN, or Password . . . . .	50
Using the Phonebook . . . . .	51
<b>Setting Up Your Phone . . . . .</b>	<b>53</b>
Storing Your Name and Phone Number . . . . .	53
Setting the Time and Date . . . . .	53
Setting a Ring Style . . . . .	54
Setting Answer Options . . . . .	55
Setting a Wallpaper Image . . . . .	56
Setting a Screen Saver Image . . . . .	57
Setting Display Brightness . . . . .	58
Setting Display Color . . . . .	58
Adjusting the Backlight . . . . .	58
Setting Display Timeout . . . . .	58
<b>Calling Features . . . . .</b>	<b>59</b>
Changing the Active Line . . . . .	59
Redialing a Number . . . . .	59
Using Automatic Redial . . . . .	60
Using Caller ID . . . . .	60
Turning Off a Call Alert . . . . .	61
Calling an Emergency Number . . . . .	61
Dialing International Numbers . . . . .	62
Viewing Recent Calls . . . . .	62
Returning an Unanswered Call . . . . .	64
Using the Notepad . . . . .	65
Attaching a Number . . . . .	65
Calling With Speed Dial . . . . .	66
Calling With 1-Touch Dial . . . . .	66
Using Voicemail . . . . .	66
Using Call Waiting . . . . .	68



Putting a Call On Hold . . . . .	69
Transferring a Call. . . . .	69
<b>Phone Features . . . . .</b>	<b>71</b>
Main Menu . . . . .	71
Settings Menu. . . . .	72
Feature Quick Reference . . . . .	73
<b>Specific Absorption Rate Data . . . . .</b>	<b>92</b>
<b>Index . . . . .</b>	<b>94</b>

# Getting Started

---



**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

## About This Guide

This guide describes the basic features of your Motorola wireless phone.

**Note:** A *More Here* reference guide for your phone is also available that describes your phone's features in more detail.

To obtain the *More Here* guide for your phone, or another copy of this guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals> (U.S.A.)

<http://motorola.ca/consumer> (Canada)

or contact the Motorola Customer Call Center at  
1-800-331-6456 (U.S.A.) or 1-800-461-4575 (Canada).

## Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

## Optional Accessories




This label identifies a feature that requires an optional Motorola Original™ accessory.

## Installing the SIM Card

Your SIM (Subscriber Identity Module) card contains your phone number, service details, and phonebook/message memory.



**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

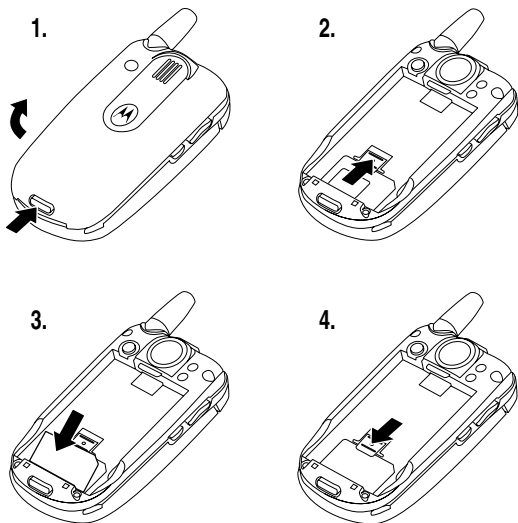

## Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.



To maximize your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.






The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

**Warning:** Never dispose of batteries in a fire because they may explode.

# Installing the Battery



Your phone is designed to use only Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

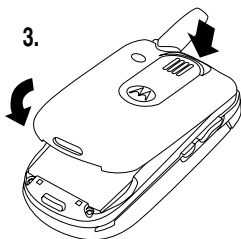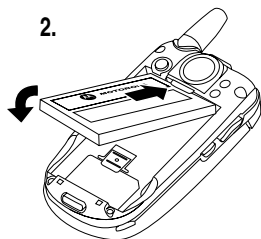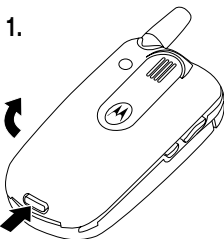


# Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.



## Action

- 1 Plug the travel charger into your phone with the release tab facing up.

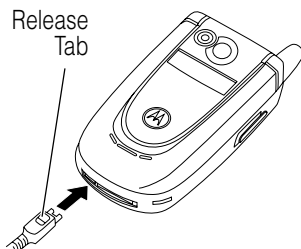


- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.

**Tip:** You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.


# Turning Your Phone On


## Action

- 1 Open your phone.


- 2 Press and hold  for 2 seconds to turn on the phone.

Power  
Key

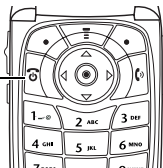

- 3 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.


**Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 4 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.



# Adjusting Volume

Press the up or down volume keys to:

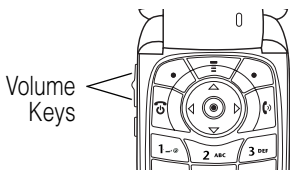



- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)

**Tip:** At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

- turn off an incoming call alert

## Making a Call


	Press	To
1	keypad keys	dial the phone number
2		make the call
3		end the call and “hang up” the phone when you are finished

**Tip:** You can also close the phone flip to end the call.




## Answering a Call





When you receive a call, your phone rings and/or vibrates and displays an incoming call message.


When the phone flip is active, open the phone to answer the call. (To activate, press  > **Settings** > **In-Call Setup** > **Answer Options** > **Open to Answer.**)

If the phone flip is **not** active:

Press	To
1  or <b>ANSWER</b> (  )	answer the call
2 	end the call and “hang up” the phone when you are finished

## Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers.**

**Note:** Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 53. If you do not know your phone number, contact your service provider.

# Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlight features.



## Taking and Sending a Photo

**Shortcut:** From the home screen, press **CAMERA** (📷) to activate the camera.

To activate your phone's camera:

### Find the Feature



> **Multimedia** > **Camera**

The active viewfinder image appears on your display.

Press ⬆️ up or down to zoom in or out on viewfinder image.

Press ⬅️ left or right to decrease or increase image brightness.

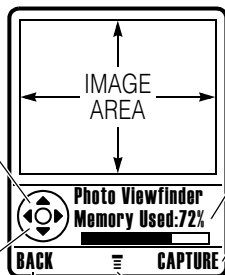


Photo storage memory space currently in use.

Take a photo.

Press 📖 to open **Pictures Menu**.

Return to previous screen.

Point the camera lens at the photo subject, then:



Press	To
1 <b>CAPTURE</b> (📷)	take a photo
2 <b>STORE</b> (📷)	view storage options
or	
<b>DISCARD</b> (📷)	delete the photo and return to active viewfinder
	If you choose to store the photo, continue to step 3.
3 (🔄)	scroll to <b>Send in Message</b> , <b>Store Only</b> , <b>Apply as Wallpaper</b> , <b>Apply as Screen Saver</b> , <b>Apply as Phonebook Entry</b> , or <b>Send to Blog*</b>
4 <b>SELECT</b> (📷)	perform the storage option of your choice

\* Optional network/subscription dependent feature. Not all features may be available on your phone.

Press (☰) to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

Option	Description
<b>Go To Pictures</b>	View pictures and photos stored on your phone.
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Delete All</b>	Delete all pictures.

Option	Description
<b>Pictures Setup</b>	Open the setup menu to adjust picture settings.
<b>View Free Space</b>	See how much memory remains for storing pictures.









## Sending a Multimedia Message



A *Multimedia Messaging Service (MMS)* *multimedia message* contains one or more slides with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

### Find the Feature

-  > **Messages**
- > **Create Message**
- > **New Multimedia Msg**

Press	To
1 keypad keys	enter slide text
2 	open the <b>MMS Menu</b>
3 	scroll to <b>Insert</b>
4 <b>SELECT</b> (  )	display a list of items you can insert
5 	scroll to <b>Picture, Voice Record, Sound, Soundtrack, or Video</b>
6 <b>SELECT</b> (  )	select the file type
7 	highlight the file you want



Press	To
<b>8 SELECT</b> (📄)	insert the file  To add another slide to the message, continue to step 9.  To send the message, go to step 14.
<b>9</b> (📄)	open the <b>MMS Menu</b> to insert a new slide
<b>10</b> (⬅️)	scroll to <b>Insert</b>
<b>11 SELECT</b> (📄)	display a list of items you can insert
<b>12</b> (⬅️)	scroll to <b>New Page</b>
<b>13 SELECT</b> (📄)	insert a new slide after the current slide  Repeat steps 1 to 8 to enter contents for the new slide.
<b>14 OK</b> (📄)	store the message
<b>15</b> (⬅️)	scroll to a <b>Send To</b> option:  Highlight <b>[One Time Entry]</b> to enter one or more phone numbers and/or email addresses.  Highlight <b>[New Phonebook Entry]</b> to enter a number/address and add it to the phonebook.  Or highlight an existing phonebook entry.

Press	To
<b>16 SELECT</b> (📞)	select [One Time Entry] or [New Phonebook Entry]
<b>or</b>	
<b>ADD</b> (📞)	add a phonebook entry to the list of recipients
<b>17 DONE</b> (📞)	store the numbers/addresses
<b>18</b> (🔄)	scroll to <b>Subject</b>
<b>19 CHANGE</b> (📞)	select <b>Subject</b>
<b>20</b> keypad keys	enter the subject
<b>21 OK</b> (📞)	store the subject
<b>22 SEND</b> (📞)	send the message



## Receiving a Multimedia Message



When you receive a multimedia message or letter, your phone displays the 📧 (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press	To
<b>READ</b> (📞)	open the message

Multimedia messages that you receive can contain different media objects:





- Photos, pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.

**Note:** In a multimedia letter, you may have to highlight an indicator embedded in the text to play a sound file or video clip.

- Attached files are added to the end of the message. To open the attachment, highlight the file indicator/filename and press **VIEW** (👁️) (image file type), **PLAY** (🔊) (sound file or video clip), or **OPEN** (👁️) (vObject such as phonebook or datebook entry, or unknown file type).

## Playing Video Clips

You can download video clips with the micro-browser, and send and receive video clips in multimedia messages.

To play a video clip stored on your phone:


### Find the Feature

📄 > **Multimedia** > **Videos**

Press	To
1 🔄	scroll to the video clip
2 <b>SELECT</b> (👁️)	start video clip playback



The video clip displays in the video clip playback screen:

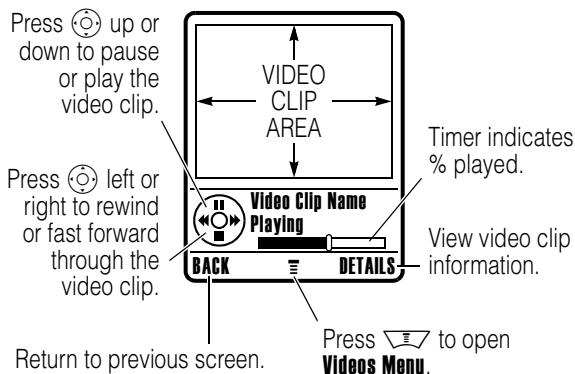

## Using a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth-enabled headset accessory, speakerphone, or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronize data.

To connect your phone to a headset accessory or handsfree device:


### Find the Feature

- > **Settings > Connection**  
> **Bluetooth Link**  
> **Handsfree**  
> **[Look For Devices]**



Your phone displays a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone lists the connected device and identifies it with a ✓ (in use) indicator.

To connect to a device, highlight the device name and press **SELECT** (⏏).

The device may request permission to bond with your phone. Select **YES** (⏏) and enter the correct PIN code to create a secure connection with the device. When the connection is made, the  (Bluetooth) indicator or a **Bluetooth Connected** message displays in the home screen.


## Using Ring Lights

Set up your phone to display a light pattern (in addition to or instead of a ring/vibrate alert) when you receive an incoming call. To select a light pattern:

### Find the Feature



> **Settings** > **Ring Styles**  
> **Ring Lights**

	Press	To
1		scroll to the light pattern
2	<b>SELECT</b> (⏏)	select the light pattern

The same light pattern displays for all incoming calls. You can use the light ID feature to display a distinctive light pattern when you receive calls from phonebook entries in a specific category. To set a light ID for a phonebook category, see page 79.

# Using Event Lights



When event lights are activated, your phone displays a light pattern to notify you of the following events: incoming calls from specific phonebook categories, incoming text and voicemail messages, alarms, power up, power down, battery charging, Bluetooth connect, Bluetooth activity, and Bluetooth disconnect.

To turn event lights on or off:

## Find the Feature



> **Settings** > **Ring Styles**  
> **Event Lights**

Press	To
1 	scroll to <b>On</b> or <b>Off</b>
2 <b>SELECT</b> (  )	select the option

# Changing Phone Covers



You can change the flip cover and battery cover on your phone to personalize its appearance.

Matching front and back cover sets are available in a variety of colors and designs.

Your phone is designed to be used only with Motorola Original™ accessories. See your Motorola retailer for these replaceable covers.




## Removing a Flip Cover



### Action


- 1 Close the phone flip.
- 2 Pull down on both sides of the flip cover to slide it off the phone.

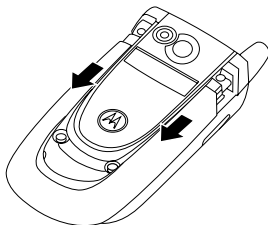

## Attaching a Flip Cover

### Action

- 1 Close the phone flip.
- 2 Line up the ridges on each side of the cover so that they align with the slots on the phone.

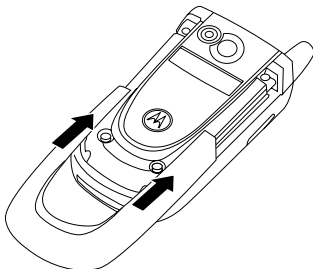


- 3 Slide the cover onto the phone until it snaps into place.


# Learning to Use Your Phone

See page 1 for a basic phone diagram.

## Using the Display

The *home screen* is displayed when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

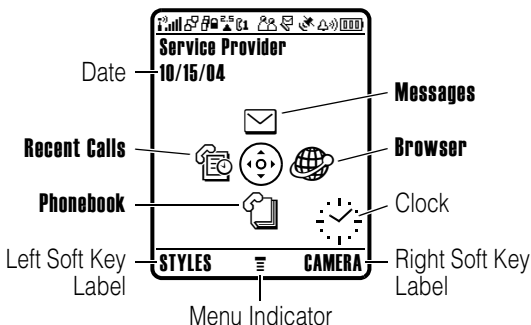



 

Press the 5-way navigation key (⊙) left, right, up, or down to select one of the menu feature icons. If you select a menu icon by mistake, press  to return to the home screen.

**Note:** Your home screen may look different than the display shown above. For example, your service provider




may hide the menu feature icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide the menu icons, see page 81.

The  (menu) indicator indicates that you can press the menu key () to enter the main menu.


Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the function indicated by the left or right soft key label.

 
Your phone can display an analog or digital clock in the home screen (see page 80).


The following status indicators can display:

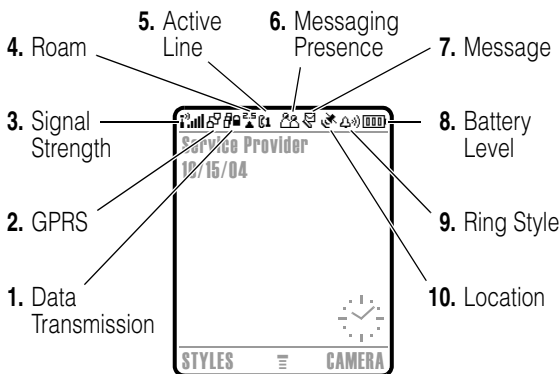



**1. Data Transmission Indicator** Shows connection and data transmission status. Indicators can include:

 
 = secure packet data transfer


 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure *Circuit Switch Data* (CSD) call

 = unsecure CSD call

 
 = Bluetooth® connection





**2. GPRS Indicator** Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other

indicators can include:

 = GPRS PDP context active

 = GPRS packet data available

**3. Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator is displayed.





**4. Roam Indicator** Shows when your phone is seeking or using another network outside your home network. Indicators can include:



 = 2.5G home


 = 2.5G roam


 = 2G home

 = 2G roam



**5. Active Line Indicator** Shows  or  to indicate the current active phone line. Other indicators can include:

 = line 1 active,  
call forward on

 = line 2 active, call  
forward on


 = alarm activated




**6. Messaging Presence Indicator** Shows when instant messaging is active. Indicators can include:


 = IM active


 = available for IM

 = busy

 = invisible to IM

 = available for  
phone calls


 = offline


When a Java™ application is active, a  (Java midlet) indicator can display in this location.




 


**7. Message Indicator** Displays when you receive a new message. Indicators can include:


 = text message

 = voicemail message

 = voicemail and text message

 = answering machine


 = IM message


 = active chat session

When you enter a message, a number in this location shows the number of characters left on the current page (text message), or the message size in bytes/kilobytes (multimedia message or letter).

**8. Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.


**9. Ring Style Indicator** Shows the ring style setting.

 = loud ring

 = soft ring

 = vibrate

 = vibrate and ring

 = silent



**10. Location Indicator** Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:


 = location on

 = location off



# Using the 5-Way Navigation Key

5-way  
Navigation  
Key

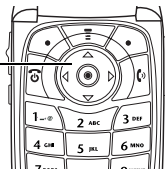


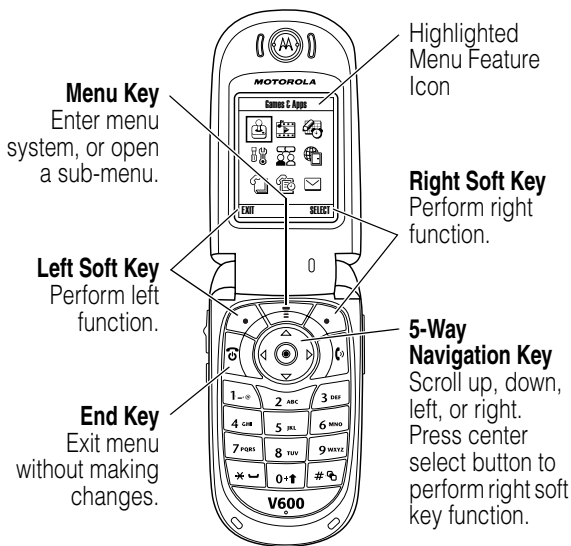
Use the 5-way navigation


key (⤿) to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press the *center select* button to select a highlighted menu item. The center select button usually performs the same function as the right soft key (⏏).



# Using Menus

From the home screen, press  to enter the main menu.



Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that



may appear in the main menu, depending on your service provider and service subscription options.

Menu Icon	Feature	Menu Icon	Feature
	Games & Apps		Multimedia
	Office Tools		Settings
	IM		Web Access
	Phonebook		Recent Calls
	Messages		Chat

## Selecting a Menu Feature

This guide shows you how to select a menu feature, starting from the home screen.


### Find the Feature

> Recent Calls > Dialed Calls

This example shows that from the home screen, you must press , scroll to and select **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

## Selecting a Feature Option

Some features require you to select an option from a list:

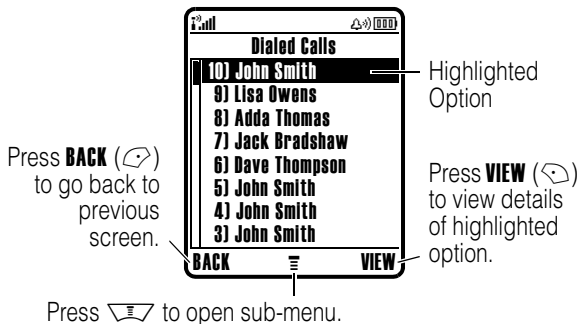


- Press to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.




# Entering Text

Some features require you to enter information.

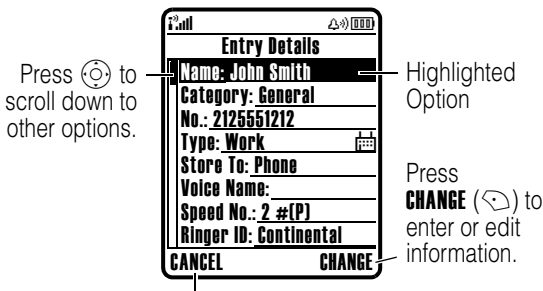

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.


The message center lets you compose and send text messages.

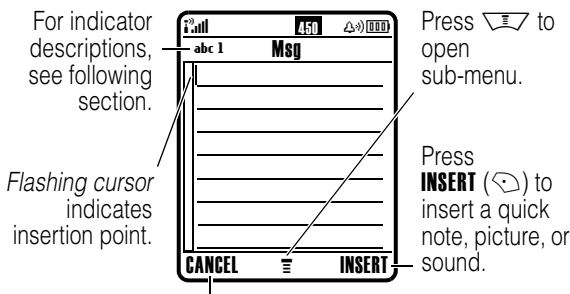


Press **CANCEL** () to exit without making changes.

## Choosing a Text Entry Method


Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press  in any text entry screen to select one of the following entry methods:

<b>Primary</b>	The primary text entry method (see below to set).
<b>Numeric</b>	Enter numbers only (see page 44).
<b>Symbol</b>	Enter symbols only (see page 44).
<b>Secondary</b>	The secondary text entry method (see below to set).

Alternatively, you can select a text entry method in any text entry screen by pressing  > **Entry Mode**.

 
## Setting Up a Text Entry Method

Press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

<b>ITAP</b>	Let the phone predict each word as you press keys (see page 42).
<b>Tap</b>	Enter letters and numbers by pressing a key one or more times.
<b>Tap Extended</b>	Enter letters, numbers, and symbols by pressing a key one or more times.
<b>None</b>	Hide the <b>Secondary</b> setting (only available for <b>Secondary Setup</b> ).



## Using Capitalization

Press  in any text entry screen to change text case. The following indicators show capitalization status:

abc = no capital letters







Abc = capitalize next

ABC = all capital letters

letter only

## Text Entry Method Indicators

When you select the **Primary** or **Secondary** text entry method, the following indicators identify the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalize next letter only
1↑	2↑	Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalize next letter only
		iTAP, all capital letters

The following indicators identify **Numeric** or **Symbol** entry method:

123 = numeric method

@ = symbol method




## Using Tap Method


This is the standard method for entering text on your phone.






Regular **Tap** method cycles through the letters and number of the key you press. **Tap Extended** method also cycles through additional symbols as shown in the “Character Chart” on page 41.

Press	To
1 A keypad key one or more times	select a letter, number, or symbol
2 Keypad keys	enter remaining characters <b>Tip:</b> Press  right to accept a word completion, or  to insert a space.
3 <b>OK</b> (  )	store the text


In a text entry screen, you can press  to switch entry methods. An indicator shows which method is active (see page 38). If **Tap** or **Tap Extended** is not available as the **Primary** or **Secondary** entry method, see page 37.



When you enter text with **Tap** or **Tap Extended** method, the soft key functions change.

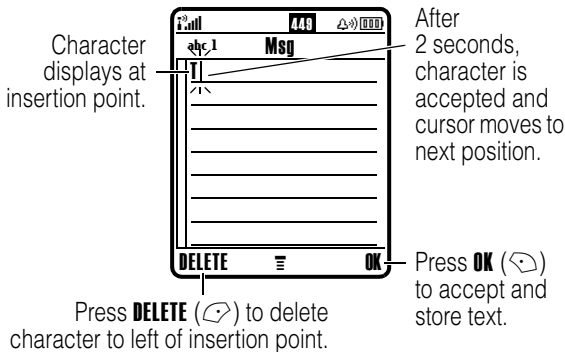


 


 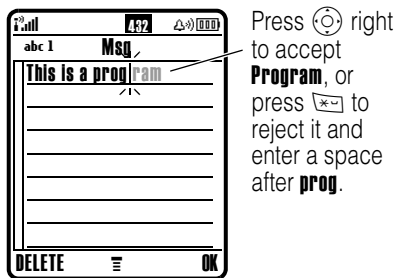


 

 


When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:




If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.


## Character Chart

Use this chart as a guide for entering characters with **Tap Extended** method.



	. 1 ? ! , @ _ & ~ : ; " - ( ) ' ÿ ÿ % £ \$ ¥ ¤ € + x * / \ [ ] = > < # §
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ë é è ê φ
	g h i 4 ĩ í î γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú ù û
	w x y z 9 ξ ψ
	<i>change text case, for capital letters</i>
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry method (hold for default)</i>

**Note:** This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

## Tap Method Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.
- Press  left or right to move the flashing cursor to the left or right in a text message.




- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

## Using iTAP™ Method


iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter. This can be faster than **Tap** method, because your phone combines the keypresses into common words.

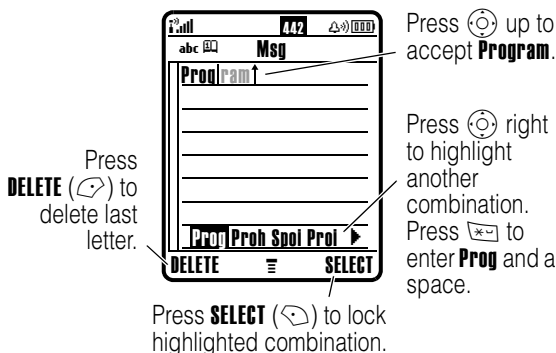


For example, if you press    , letter combinations that match your keypresses display:



If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

## Entering Words


In a text entry screen, you can press  to switch entry methods. An indicator tells you which method is active (see page 38). If **ITAP** method is not available as the **Primary** or **Secondary** entry method, see page 37.


Press	To
1 Keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2  left or right	highlight the combination you want
3 <b>SELECT</b> 	lock a highlighted combination  You can press keypad keys to add more letters to the end of the combination.
or  	enter the highlighted combination when it spells a word  A space is automatically inserted after the word.

If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.







## Using Numeric Method

In a text entry screen, press  to switch entry methods until the 123 (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.





 


 

 


## Using Symbol Method


In a text entry screen, press  to switch entry methods until the @ (symbol) indicator displays.

	Press	To
1	Keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2	 left or right	highlight the combination you want
3	<b>SELECT</b> (  )	lock a highlighted combination  You can press keypad keys to add more symbols to the end of the combination.
	or	
		enter the highlighted combination

## Symbol Chart

Use this chart as a guide for entering characters with symbol method.

	. ? ! , @ _ & ~ : ; " - ( ) ' ` ; ı % £ \$ ¥ ¤ €
	@ _ \
	/ : ;
	" & '
	( ) [ ] { }
	ı ı ~
	< > =
	\$ £ ¥ ¤ €
	# % *
	+ - x * / = > < # §
	<i>enter a space (hold to enter a return)</i>
	<i>change text entry method (hold for default)</i>

**Note:** This chart may not reflect the exact character set available on your phone. In an email address or URL editor,  first shows common characters for that editor.

## Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

### Action

Press **DELETE** () to delete one letter at a time.

Hold **DELETE** () to delete the entire message.




## Using the Smart Key

The *smart* key gives you another way to perform many basic phone

functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key (⏏).

Smart  
Key

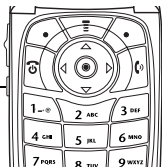

## Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of incoming calls and other events. You can perform the following functions in the external display.

### Setting Phone Ring Style

Press	To
1 volume keys	scroll to <b>Style</b>
2 smart key	select a ring style
3 volume keys	return to the home screen



## Adjusting Voice Call Forwarding



**Tip:** You must store a forwarding number to use this feature (see page 73).

Press	To
1 volume keys	scroll to <b>Forward</b>
2 smart key	select <b>All Calls</b> or <b>Off</b>
3 volume keys	return to the home screen

## Returning an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

Action
1 Press the smart key to view the received calls list.
2 Press the volume keys to select a call to return.
3 Press and hold the smart key to make the call.

**Note:** Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.

## Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.



Press **SPEAKER** (🔊) to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** (🔊) again or turn the phone off.

**Note:** The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.



## ***Changing a Code, PIN, or Password***

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

**Find the Feature**



**> Settings > Security  
> New Passwords**

# Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 61).



## Locking Your Phone Manually

### Find the Feature



> **Settings** > **Security**  
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (⏻)	lock the phone

## Unlocking Your Phone

**Tip:** Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (⏻)	unlock your phone

## Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

### Find the Feature



 > **Settings** > **Security**  
> **Phone Lock**  
> **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your unlock code
2 <b>OK</b> (  )	activate automatic lock

## If You Forget a Code, PIN, or Password

**Note:** Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 <b>OK</b> (  )	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

## Using the Phonebook

This section briefly describes basic phonebook operations. For more information about using the phonebook, see page 77 and the *More Here* guide (described on page 8).

### Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (☎) to create a phonebook entry with that number. Fill in the other fields to complete the entry.

Select **MORE** to store another number (for example, a work number) under the same **Name**.

### Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (🗣). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name. Press **DONE** (☎) to store the voice name.

**Note:** This option is not available for entries stored on the SIM card.

### Dialing a Number



Press ☰ > **Phonebook**, highlight the phonebook entry, press ☎ to call.



## Voice Dialing a Number



Press and release the voice key, and say the entry's name (within 2 seconds).

## Sorting Phonebook Entries

Press  > **Phonebook**, press  > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.



When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 79.

## Setting a Picture ID for a Phonebook Entry



Press  > **Phonebook** > *entry*, press  > **Edit** > **Picture** > *picture name*.

Also see pages 3 and 17.

## Setting Picture ID View

Press  > **Phonebook**, press  > **Setup** > **View by** > **Picture**.

## Viewing Entries By Category

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 78.



# Setting Up Your Phone



## Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

### Find the Feature

 > **Settings** > **Phone Status**  
> **My Tel. Numbers**

**Shortcut:** Press   from the home screen to edit your name and phone number.

If you do not know your phone number, contact your service provider.

## Setting the Time and Date

You must set the time and date to use the datebook.

### Find the Feature

 > **Settings** > **Initial Setup**  
> **Time and Date**



# Setting a Ring Style



Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.


You can select one of 5 different ring styles. The ring style indicator in the display shows the current ring style (see pages 28 and 31).

To set a ring style:

## Find the Feature

 > **Settings** > **Ring Styles**  
> **Style**

	Press	To
1		scroll to the ring style
2	<b>SELECT</b> (  )	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Settings** > **Ring Styles** > **Style Detail**.





# Setting Answer Options





You can use additional, alternative methods to answer an incoming call.

**Multi-Key** answer by pressing any key

**Open to Answer** answer by opening the flip

To activate or deactivate an answer option:

**Find the Feature**  > **Settings** > **In-Call Setup**  
> **Answer Options**

Press	To
1 	scroll to <b>Multi-Key</b> or <b>Open to Answer</b>
2 <b>CHANGE</b> (  )	select the option
3 	scroll to <b>On</b> or <b>Off</b>
4 <b>SELECT</b> (  )	confirm the setting




 



 



# Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

## Find the Feature

 > **Settings** > **Personalize**  
> **Wallpaper**

Press	To
1 	scroll to <b>Picture</b>
2 <b>CHANGE</b> (  )	open the picture viewer
3  up or down	scroll to a picture/animation  Scroll to <b>(None)</b> to turn off the wallpaper image.
4 <b>SELECT</b> (  )	select the image
5 	scroll to <b>Layout</b>
6 <b>CHANGE</b> (  )	adjust the image layout
7 	scroll to <b>Center</b> , <b>Tile</b> , or <b>Fit-to-screen</b>  <b>Center</b> places the image in the center of the display.  <b>Tile</b> fills the display with adjacent copies of the image.  <b>Fit-to-screen</b> resizes the image, if necessary, to fit the display.
8 <b>SELECT</b> (  )	confirm the layout setting
9 <b>BACK</b> (  )	save wallpaper settings



# Setting a Screen Saver Image








 
 
Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the flip is open and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

**Tip:** Turn off the screen saver to extend battery life.

## Find the Feature

 > **Settings** > **Personalize**  
> **Screen Saver**

Press	To
1 	scroll to <b>Picture</b>
2 <b>CHANGE</b> (  )	open the picture viewer
3  up or down	scroll to a picture/animation  Scroll to <b>(None)</b> to turn off the screen saver image.
4 <b>SELECT</b> (  )	select the image
5 	scroll to <b>Delay</b>
6 <b>CHANGE</b> (  )	set the delay interval
7 	scroll to the inactivity interval that triggers the screen saver
8 <b>SELECT</b> (  )	confirm the delay setting
9 <b>BACK</b> (  )	save screen saver settings



# Setting Display Brightness

**Find the Feature**



> **Settings** > **Initial Setup**  
> **Brightness**

# Setting Display Color

Select the color palette that your phone uses to display indicators, highlights, and soft key labels.

**Find the Feature**



> **Settings** > **Personalize**  
> **Color Style**

# Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

**Find the Feature**



> **Settings** > **Initial Setup**  
> **Backlight**

# Setting Display Timeout

Set the display to turn off when no activity is detected for a specified time.

**Find the Feature**



> **Settings** > **Initial Setup**  
> **Display Timeout**



# Calling Features

For basic instructions on how to make and answer calls, see page 15.

## Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

**Note:** This feature is available only for dual-line-enabled SIM cards.




### Find the Feature



> **Settings** > **Phone Status**  
> **Active Line**

The active line indicator in the display shows the current active phone line (see page 28).

## Redialing a Number

Press	To
1 	view the dialed calls list
2 	scroll to the entry you want to call
3 	redial the number



# Using Automatic Redial



When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

To redial the phone number:

**Press**



**To**

activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

## Using Caller ID

### Incoming Calls



*Calling line identification* (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.

The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID and/or light ID for specific entries stored in your phonebook. For more information, see page 77.



# Outgoing Calls



You can show or hide your phone number as an ID for the calls that you make.

## Find the Feature

 > **Settings > In-Call Setup  
> My Caller ID**

You can override the default caller ID setting when you make a call. While dialing (with digits visible in the display):

Press	To
 > <b>Hide ID/Show ID</b>	hide or show your caller ID for the next call



## Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.


Press	To
either volume key	turn off the alert

## Calling an Emergency Number

 
Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.



**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

 
	Press	To
1	keypad keys	dial the emergency number
2		call the emergency number

## Dialing International Numbers

Press and hold  to insert the local international access code (+) for the country from which you are calling.



## Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

**Shortcut:** Press  from the home screen to view the dialed calls list.






### Find the Feature

 > Recent Calls

	Press	To
1		scroll to <b>Received Calls</b> or <b>Dialed Calls</b>
2	<b>SELECT</b> (  )	select the list





Press	To
3 	scroll to an entry  <b>Note:</b> ✓ means the call connected.
4 	call the entry's number  <b>Tip:</b> Press and hold  for 2 seconds to send the number as DTMF tones during a call.
or	
VIEW 	view entry details
or	
	open the <b>Last Calls Menu</b> to perform various operations on the entry

The **Last Calls Menu** can include the following options:

Option	Description
<b>Store</b>	Create a phonebook entry with the number in the <b>No.</b> field.
<b>Delete</b>	Delete the entry.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID/Show ID</b>	Hide or show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.







Option	Description
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.
<b>Send Tones</b>	Send the number to the network as DTMF tones.  <b>Note:</b> This option displays only during a call.
<b>Talk then Fax</b>	Talk and then send a fax in the same call (see page 85).



## Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
  - X Missed Calls**, where **X** is the number of missed calls

Press	To
<b>1</b> <b>VIEW</b> 	see the received calls list
<b>2</b> 	select a call to return
<b>3</b> 	make the call



# Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

## Find the Feature

 > **Recent Calls** > **Notepad**

## Press

## To




call the number

or



open the **Dialing Menu** to attach a number or insert a special character

or

**STORE** ()

create a phonebook entry with the number in the **No.** field

---

---

## Attaching a Number

While dialing (with digits visible in the display):

## Press

## To



> **Attach Number**

attach a number from the phonebook or recent calls lists



---

---





## Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number.

**Tip:** To see an entry's speed dial number, press  > **Phonebook**, scroll to the entry, press **VIEW** ().

To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
3 	call the entry

## Calling With 1-Touch Dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

**Tip:** You must specify which phone number list you want to use with this feature: phone memory phonebook, or SIM card phonebook (see page 79).

## Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

**Note:** Your service provider may include additional information about using this feature.


## Listening to Voicemail Messages


### Find the Feature

 > Messages > VoiceMail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

## Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a **New VoiceMail** notification.

Press	To
<b>CALL</b> (  )	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.


## Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

### Find the Feature

 > Messages

 > VoiceMail Setup

Press	To
<b>1</b> keypad keys	enter your voicemail number
<b>2</b> <b>OK</b> (  )	store the number



**Note:** You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more about these characters, see the *More Here* guide.

## Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1	answer the new call
2 <b>SWITCH</b> (	switch between calls
or	
<b>LINK</b> (	connect the 2 calls
or	
> <b>End Call On Hold</b>	end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

### Find the Feature

> **Settings > In-Call Setup**  
> **Call Waiting**




# Putting a Call On Hold

**Press**

**To**

**HOLD** (☎) (if available) or put the call on hold

 > **Hold**


## Transferring a Call






You can announce that you are transferring an active call to another party, or you can directly transfer the call.

## Announce the Call Transfer

**Find the Feature**


 > **Hold**


Press	To
1 keypad keys	dial the number where you are transferring the call
2 	call the number and speak to the person who answers
3 	open the menu
4 	scroll to <b>Transfer</b>
5 <b>SELECT</b> (☎)	select <b>Transfer</b>
6 <b>OK</b> (☎)	confirm the transfer



## ***Do Not Announce the Call Transfer***

### **Find the Feature**

 > Transfer

<b>Press</b>	<b>To</b>
1 keypad keys	dial the number where you are transferring the call
2 	transfer the call





# Phone Features

## Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.

### Games & Apps

### Multimedia

- Themes
- Camera
- Pictures
- Sounds
- MotoMixer
- Videos

### Office Tools

- SIM Apps
- Calculator
- Datebook
- Shortcuts
- Voice Records
- Alarm Clock
- Dialing Services
  - Fixed Dial
  - Service Dial
  - Quick Dial

### Settings (see next page)

### IM

### Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Web Sessions
- Browser Setup

### Phonebook

### Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times
- Call Cost
- Data Times
- Data Volumes

### Messages

- Create Message
- Voicemail
- Message Inbox
- Email Msgs
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts

### Chat

# Settings Menu



## Personalize

- Home Screen
- Main Menu
- Color Style
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



## Ring Styles

- Style
  - Style Detail
- Ring Lights
- Event Lights



## Connection

- Bluetooth Link
- Sync



## Call Forward

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



## In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



## Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup
- Scroll
- Language
- Battery Save
- Brightness
- DTMF
- Master Reset
- Master Clear



## Phone Status

- My Tel. Numbers
- Credit Info/Available
- Active Line
- Battery Meter
- Other Information



## Headset



## Car Settings



## Network



## Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords



## Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Backlight
- DNS IP

## Shortcuts

### Change ringer alert:

Open flip, press down volume key to decrease volume, then switch to vibrate alert, then silent alert. Press up volume key to reset ring alert and increase volume.

### Display my phone number:

Press (from home screen).

### Go to dialed calls list:

Press (from home screen).




 


### Exit menu system:

Press .

# Feature Quick Reference













This section helps you locate features on your phone that are not described in this guide. For more detailed information, see the *More Here* guide (described on page 8).

## Calling Features

Feature	Description
<b>Conference Call</b>	During a call:  > <b>Hold</b> , dial next number, press  , press <b>LINK</b> (  ).
<b>Call Forwarding</b>	Set up or cancel call forwarding:  > <b>Settings</b> > <b>Call Forward</b>
<b>Call Barring</b>	Restrict outgoing or incoming calls:  > <b>Settings</b> > <b>Security</b> > <b>Call Barring</b>
<b>TTY Calls</b>	Set up your phone for use with an optional TTY device:  > <b>Settings</b> > <b>Initial Setup</b> > <b>TTY Setup</b>








# Messages

Feature	Description	
<b>Send Text Message</b>	Send a text message:  > <b>Messages</b> > <b>Create Message</b> > <b>New Short Message</b>	
<b>Send Multimedia Message</b>	Send a multimedia message:  > <b>Messages</b> > <b>Create Message</b> > <b>New Multimedia Msg</b>	
<b>Send Letter</b>	Send a multimedia letter:  > <b>Messages</b> > <b>Create Message</b> > <b>New Letter</b>	
<b>Use MMS Template</b>	Open an MMS template with preloaded media:  > <b>Messages</b> > <b>Create Message</b> > <b>MMS Templates</b>	
<b>Read Message</b>	Read a new text or multimedia message that you have received: Press <b>READ</b> (  ).	
<b>Store Message Objects</b>	Go to a multimedia message slide, or highlight an object in a letter, then:  > <b>Store</b>	





 





## Instant Messaging


Feature	Description	
<b>Log In</b>	Log in to instant messaging:  > <b>IM</b> > <b>Log In</b>	
<b>Find Others Online</b>	After you sign on: Select <b>Contact List</b> to see a list of other users.	
<b>Start Conversation</b>	Start a conversation: From your <b>Contact List</b> , highlight a name in <b>Online Contacts</b> , press <b>SEND IM</b> (  ).	
<b>Open Active Conversation</b>	Open a conversation in progress: From your <b>Contact List</b> , highlight a name in <b>Conversations</b> , press <b>VIEW</b> (  ).	
<b>End Conversation</b>	From the conversation display:  > <b>End Conversation</b>	
<b>Log Out</b>	Log out of instant messaging: Select <b>Log Out</b> from the <b>IM Online</b> menu.	



## Chat






 


Feature	Description	
<b>Start Chat</b>	Start a new chat session:  > <b>Chat</b>  > <b>New Chat</b>	
<b>Receive Chat Request</b>	When you receive a chat request: Press <b>ACCEPT</b> (  ) or <b>IGNORE</b> (  )	
<b>End Chat</b>	During a chat session:  > <b>End Chat</b>	

## Email









Feature	Description	
<b>Send Email Message</b>	Send an email message:  > <b>Messages</b> > <b>Create Message</b> > <b>New Email</b>	
<b>Read Email Message</b>	Read a new email message that you have received: Press <b>READ</b> (  )	



# Phonebook











Feature	Description
Create Entry	Create a new phonebook entry:  > <b>Phonebook</b>  > <b>New</b> > <b>Phone Number</b> or <b>Email Address</b>
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > <b>Phonebook</b>  > <b>New</b> > <b>Mailing List</b>
Dial Number	Call a number stored in the phonebook:  > <b>Phonebook</b> , highlight the phonebook entry, press  to call
Voice Dial Number	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry:  > <b>Phonebook</b> > <i>entry</i>  > <b>Edit</b> > <b>Ringer ID</b> > <i>ringer name</i> <b>Note:</b> The <b>Ringer ID</b> option is not available for entries stored on the SIM card.



Feature	Description
<b>Set Picture ID for Entry</b>	<p>Assign a photo or picture to a phonebook entry:</p> <p> &gt; <b>Phonebook</b> &gt; <i>entry</i></p> <p> &gt; <b>Edit</b> &gt; <b>Picture</b> &gt; <i>picture name</i></p> <p><b>Note:</b> The <b>Picture</b> option is not available for entries stored on the SIM card.</p>
<b>Set Picture ID View</b>	<p>View phonebook entries as text list, or with picture caller ID photos:</p> <p> &gt; <b>Phonebook</b></p> <p> &gt; <b>Setup</b> &gt; <b>View by</b> &gt; <i>list view</i></p>
<b>Set Category for Entry</b>	<p>Set the category for a phonebook entry:</p> <p> &gt; <b>Phonebook</b> &gt; <i>entry</i></p> <p> &gt; <b>Edit</b> &gt; <b>Category</b> &gt; <i>category name</i></p> <p><b>Note:</b> The <b>Category</b> option is not available for entries stored on the SIM card.</p>
<b>Set Category View</b>	<p>Set a phonebook category view:</p> <p> &gt; <b>Phonebook</b></p> <p> &gt; <b>Categories</b> &gt; <i>category view</i></p>
















Feature	Description
<b>Set Category Light ID</b>	<p>Set a distinctive light pattern to be displayed when you receive calls from phonebook entries in a specific category:</p> <p> &gt; <b>Phonebook</b></p> <p> &gt; <b>Categories</b>, scroll to entry, press</p> <p> &gt; <b>Edit</b> &gt; <b>Light ID</b>.</p> <p><b>Note:</b> The <b>Light ID</b> option is not available for entries stored on the SIM card.</p>
<b>Sort Phonebook List</b>	<p>Set the order in which phonebook entries are listed:</p> <p> &gt; <b>Phonebook</b></p> <p> &gt; <b>Setup</b> &gt; <b>Sort by</b> &gt; <i>sort order</i></p>
<b>Set Primary Number</b>	<p>Set the primary number for a phonebook entry with multiple numbers:</p> <p> &gt; <b>Phonebook</b>, scroll to entry, press</p> <p> &gt; <b>Set Primary</b> &gt; <i>phone number</i>.</p>
<b>Copy Phonebook Entry to Another Device</b>	<p>Copy a phonebook entry to another phone, computer, or device:</p> <p> &gt; <b>Phonebook</b>, highlight the entry, press  &gt; <b>Send</b> &gt; <b>Bluetooth</b></p>
<b>1-Touch Dial</b>	<p>Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:</p> <p> &gt; <b>Settings</b> &gt; <b>Initial Setup</b></p> <p>&gt; <b>1-Touch Dial</b></p>





## Personalizing Features

Feature	Description
<b>Ring Style</b>	Change the ring alert for an event:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <i>event name</i>
<b>Ringer IDs</b>	Activate distinctive ring alerts assigned to phonebook entries:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ringer IDs</b>
<b>Ring Volume</b>	Set ringer volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Ring Volume</b>
<b>Keypad Volume</b>	Set keypad keypress volume:  > <b>Settings</b> > <b>Ring Styles</b> > <b>Style Detail</b> > <b>Key Volume</b>
<b>Clock View</b>	Display an analog clock or digital time readout in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Clock</b>
<b>Menu View</b>	Display the main menu as graphic icons or as a text-based list:  > <b>Settings</b> > <b>Personalize</b> > <b>Main Menu</b> > <b>View</b>
<b>Main Menu</b>	Reorder your phone's main menu:  > <b>Settings</b> > <b>Personalize</b> > <b>Main Menu</b> > <b>Reorder</b>




Feature	Description
<b>Show or Hide Menu Icons</b>	Show or hide menu feature icons in the home screen:  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Home Keys</b> > <b>Icons</b>
<b>Change Soft Keys &amp; Menu Icons</b>	Change soft key labels and menu feature icons in the home screen  > <b>Settings</b> > <b>Personalize</b> > <b>Home Screen</b> > <b>Home Keys</b>
<b>Shortcuts</b>	Create a shortcut to a menu item: Highlight the menu item, then press and hold  .  Select a shortcut:  > <b>Office Tools</b> > <b>Shortcuts</b> > <i>shortcut name</i>





## Menu Features

Feature	Description
<b>Language</b>	Set menu language:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Language</b>
<b>Master Reset</b>	Reset all options <i>except</i> unlock code, security code, and lifetime timer:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Reset</b>





Feature	Description
<b>Master Clear</b>	Reset all options <i>except</i> unlock code, security code, and lifetime timer, and clear all user settings and entries <i>except</i> SIM card information:  > <b>Settings</b> > <b>Initial Setup</b> > <b>Master Clear</b>


## Dialing Features

Feature	Description
<b>Fixed Dial</b>	Turn fixed dialing on or off:  > <b>Settings</b> > <b>Security</b> > <b>Fixed Dial</b>  Use the fixed dial list:  > <b>Office Tools</b> > <b>Dialing Services</b> > <b>Fixed Dial</b>
<b>Service Dial</b>	Dial service phone numbers:  > <b>Office Tools</b> > <b>Dialing Services</b> > <b>Service Dial</b>
<b>Quick Dial</b>	Dial preprogrammed phone numbers:  > <b>Office Tools</b> > <b>Dialing Services</b> > <b>Quick Dial</b>





Feature	Description
<b>DTMF Tones</b>	<p>Activate DTMF tones:   &gt; <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>DTMF</b></p> <p>Send DTMF tones during a call:            Press number keys.</p> <p>Send stored numbers as DTMF tones during a call:            Highlight a number in the phonebook or recent calls lists, then press   &gt; <b>Send Tones</b>.</p>





## Call Monitoring

**Network connection time** is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.








Feature	Description
<b>Call Times</b>	<p>View call timers:   &gt; <b>Recent Calls</b> &gt; <b>Call Times</b></p> 









Feature	Description	
<b>In-Call Timer</b>	Display time or cost information during a call:  > <b>Settings</b> > <b>In-Call Setup</b> > <b>In-Call Timer</b>	
<b>Call Cost</b>	View call cost trackers:  > <b>Recent Calls</b> > <b>Call Cost</b>	

## Handsfree Features






**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description	
<b>Speaker-phone</b>	Activate a connected external speakerphone during a call: Press <b>SPEAKER</b> (  ) (if available) or  > <b>Spkrphone On</b> .	
<b>Auto Answer</b> (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > <b>Settings</b> > <b>Car Settings</b> or <b>Headset</b> > <b>Auto Answer</b>	
<b>Voice Dial</b> (headset)	Enable voice dial with headset send/end key:  > <b>Settings</b> > <b>Headset</b> > <b>Voice Dial</b>	














Feature	Description	
<b>Auto Handsfree</b> (car kit)	Automatically route calls to a car kit when connected:  > <b>Settings &gt; Car Settings &gt; Auto Handsfree</b>	 Optional Accessory
<b>Power-Off Delay</b> (car kit)	Set the phone to stay on for a period of time after the ignition is switched off:  > <b>Settings &gt; Car Settings &gt; Power-Off Delay</b>	 Optional Accessory
<b>Charger Time</b> (car kit)	Charge the phone for a period of time after the ignition is switched off:  > <b>Settings &gt; Car Settings &gt; Charger Time</b>	 Optional Accessory

## Data and Fax Calls

Feature	Description	
<b>Send Data or Fax</b>	Connect your phone to the device, then place the call through the device application.	 Optional Accessory
<b>Receive Data or Fax</b>	Connect your phone to the device, then answer the call through the device application.	 Optional Accessory
<b>Talk Then Fax</b>	Connect your phone to the device, enter the number, press  > <b>Dialing Menu &gt; Talk Then Fax</b> , then press  to make the call.	 Optional Accessory





# Bluetooth® Wireless Connections

Feature	Description	
<b>Make Phone Visible to Other Device</b>	Allow an unknown Bluetooth device to discover your phone:  > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Setup</b> > <b>Find Me</b>	
<b>Connect to Recognized Device</b>	Connect to a recognized handsfree device:  > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Handsfree</b> > <i>device name</i>	
<b>Disconnect From Device</b>	Disconnect from a device: Highlight the device name and press <b>DROP</b> (  ).	
<b>Switch to Device During Call</b>	Switch to a headset or car kit during a call:  > <b>Use Bluetooth</b>	
<b>Edit Device Properties</b>	Edit the properties of a recognized device: Highlight the device name and press  > <b>Edit</b> .	
<b>Set Bluetooth® Options</b>	Set your phone's Bluetooth options:  > <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Setup</b>	














## Network Features

Feature	Description
<b>Network Settings</b>	View network information and adjust network settings:  > <b>Settings</b> > <b>Network</b> 

## Personal Organizer Features



Feature	Description
<b>Create Datebook Event</b>	Create a new datebook event:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the center select button, press  > <b>New</b>
<b>View Datebook Event</b>	View or edit event details:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the center select button, press <b>VIEW</b> (  )
<b>Event Reminder</b>	View event reminder: <b>VIEW</b> (  )  Dismiss event reminder: <b>EXIT</b> (  )
<b>Copy Datebook Event to Another Device</b>	Copy a datebook event to another phone, computer, or device:  > <b>Office Tools</b> > <b>Datebook</b> , highlight the day, press the center select button, highlight the event, press  > <b>Send</b> > <b>Bluetooth</b>
<b>Set Alarm</b>	Set an alarm:  > <b>Office Tools</b> > <b>Alarm Clock</b>










Feature	Description
<b>Turn Off Alarm</b>	<p>Turn off alarm: Press <b>DISABLE</b> (📞) or 📞</p> <p>Set 8-minute delay: Press <b>SNOOZE</b> (📞)</p>
<b>Create Voice Record</b>	<p>Create a voice record: Press and hold voice key, speak into the phone, release voice key.</p> <p><b>Note:</b> Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.</p>
<b>Play Voice Record</b>	<p>Play back a voice record: 📞 &gt; <b>Office Tools</b> &gt; <b>Voice Records</b> &gt; <i>voice record</i></p>
<b>Calculator</b>	<p>Calculate numbers: 📞 &gt; <b>Office Tools</b> &gt; <b>Calculator</b></p>
<b>Currency Converter</b>	<p>Convert currency: 📞 &gt; <b>Office Tools</b> &gt; <b>Calculator</b> 📞 &gt; <b>Exchange Rate</b></p> <p>Enter exchange rate, press <b>OK</b> (📞), enter amount, press 📞 &gt; <b>Convert Currency</b>.</p>










## Security

Feature	Description
<b>SIM PIN</b>	<p>Lock or unlock the SIM card:   &gt; <b>Settings</b> &gt; <b>Security</b> &gt; <b>SIM PIN</b></p> <p><b>Caution:</b> If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays <b>SIM Blocked</b>.</p>
<b>Lock Application</b>	<p>Lock phone applications:   &gt; <b>Settings</b> &gt; <b>Security</b>            &gt; <b>Lock Application</b></p>

## News and Entertainment






Feature	Description
<b>Launch Micro-Browser</b>	<p>Start a micro-browser session:   &gt; <b>Web Access</b> &gt; <b>Browser</b></p> 
<b>Download Objects from Web Page</b>	<p>Download a picture, sound, or phone theme from a Web page:            Highlight the file, press <b>SELECT</b> () , press <b>STORE</b> ().</p> 
<b>Web Sessions</b>	<p>Select or create a Web session:   &gt; <b>Web Access</b>            &gt; <b>Web Sessions</b></p> 



Feature	Description
<b>Apply Phone Theme</b>	<p>Apply a grouped set of image and sound files to your phone:</p> <p> &gt; <b>Multimedia</b> &gt; <b>Themes</b> &gt; <i>theme</i></p> 
<b>Download Game or Application (Micro-Browser)</b>	<p>Download a Java™ game or application with the micro-browser:</p> <p> &gt; <b>Web Access</b> &gt; <b>Browser</b>, highlight the application, press <b>SELECT</b> () , press <b>DOWNLOAD</b> () .</p> 
<b>Download Game or Application (Computer)</b>	<p>Download a Java game or application from a computer:</p> <p>Connect your phone to the computer, press  &gt; <b>Settings</b> &gt; <b>Java Settings</b> &gt; <b>Java App Loader</b>.</p> 
<b>Launch Game or Application</b>	<p>Launch a Java game or application:</p> <p> &gt; <b>Games &amp; Apps</b>, highlight the application, press <b>SELECT</b> () .</p> 
<b>Manage Pictures</b>	<p>Manage pictures and animations:</p> <p> &gt; <b>Multimedia</b> &gt; <b>Pictures</b></p> 
<b>Manage Sounds</b>	<p>Manage ring tones, sounds that you have composed or downloaded:</p> <p> &gt; <b>Multimedia</b> &gt; <b>Sounds</b></p>





Feature	Description
<b>Manage Video Clips</b>	Manage video clips:  > <b>Multimedia</b> > <b>Videos</b>
<b>Edit Sounds With MotoMixer</b>	Edit MIDI-based sound files that you can use with your phone:  > <b>Multimedia</b> > <b>MotoMixer</b> > <b>[New Mix]</b> or <i>mix file name</i>
<b>Create Ring Tones</b>	Create ring tones that you can use with your phone:  > <b>Multimedia</b> > <b>Sounds</b> > <b>[New iMelody]</b>
<b>Camera</b>	Adjust light level and other settings for the integrated camera:  > <b>Multimedia</b> > <b>Camera</b>  > <b>Pictures Setup</b>

## ***Specific Absorption Rate Data***

---

**The model wireless phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when

tested for use at the ear is 1.40 W/kg, and when worn on the body, as described in this user guide, is 1.04 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 1.07 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

# Index

---

## A

- accessories 9, 25, 47, 73
- accessory connector port 1
- active line indicator 28, 30
- active line, changing 59
- alarm clock 87
- alert
  - creating 91
  - defined 54
  - setting 15, 46, 54, 80
  - turning off 15, 61
- animation
  - downloading 74, 89
  - screen saver 57
  - viewing 90
  - wallpaper 56
- answering a call 16, 55
- application, locking and
  - unlocking 89
- automatic redial 60

## B

- backlight 58
- barring calls 73

## battery

- charging 13
- extending battery life 10, 57, 58
- installing 12
- level indicator 28, 31
- Bluetooth® 3, 23, 79, 86, 87
- brightness, setting 58
- browser. *See* micro-browser

## C

- calculator 88
- call
  - adding digits after phone number 64
  - alert, turning off 15, 61
  - answer options 55
  - answering 16
  - barring 73
  - barring password,
    - changing 48
  - call waiting 68
  - costs 84
  - deleting 62
  - dialed calls list 62
  - dialing 15
  - emergency number 61
  - ending 15, 16



- forwarding 47, 73
- handsfree speaker 47
- hold 69
- international access code 62
- making 15
- received calls list 62
- receiving 16
- recent calls 62
- ring style 15, 46, 54, 80
- speakerphone 84
- storing 62
- talk then fax 64
- timers 83, 84
- transferring 69
- unanswered call 47, 64
- Call Failed, Number Busy message 60
- call waiting 68
- caller ID 3, 18, 52, 60, 63, 78
- calling line identification. See caller ID
- camera
  - settings 91
  - taking a photo 2, 17
- car kit 84
- center select button 32
- character chart 41
- chat 76

- clock
  - illustration 27
  - selecting analog or digital 80
  - setting 53
- codes
  - changing 48
  - default 48, 49, 50
  - forgetting 50
- color, setting 58
- conference call 73
- convertible covers 25
- cursor 36
- customizing the menu 80

## D

- data call 85
- date, setting 53
- datebook 87
- deleting a call 62
- diald calls list 62
- dialing a number 15, 82
- display
  - backlight 58
  - brightness 58
  - color 58
  - description 27
  - home screen 27
  - language 81
  - personalizing 81
  - timeout 58

distinctive ringer alert 80

DTMF tones

activating 83

sending 63, 64, 83

## E

earpiece volume 15

email 76

emergency number 61

end key 1, 15, 16, 33

ending a call 15, 16

Enter Unlock Code

message 49, 50

event lights 3, 25

external display 46

## F

fax call 64, 85

5-way navigation key 1, 32,  
33

fixed dial 82

flashing cursor 36

flip

external display 46

open to answer 16, 55

replacing flip cover 25

screen saver 57

forwarding calls 47, 73

## G

games 90

GPRS indicator 28, 29

groove tunes 91

## H

handsfree speaker 47

handsfree use 84

headset

accessory, using 84

using with external

display 47

headset jack 1

Hide ID feature 63

hold a call 69

home keys, personalizing  
81

home screen

defined 27

selecting clock view 80

## I

IM 75

in use indicator 28

incoming call

answering 16

forwarding 47, 73

Incoming Call message 60

## indicators

- active line 28, 30
- battery level 28, 31
- GPRS 28, 29
- in use 28
- Java midlet 30
- location 28, 31
- loud ring style 31
- menu 27
- message 28, 31
- message waiting 21
- messaging presence 28, 30
- missed call 64
- ring style 28, 31
- roam 28, 30
- signal strength 28, 29
- silent alert 31
- soft ring style 31
- text case 38
- text entry method 31, 38
- transmission 29
- vibrate alert 31
- vibrate and ring style 31
- voicemail message 31, 67

instant messaging. *See* IM

international access code  
62

iTAP software 42

## J

Java applications 90

Java midlet indicator 30

joystick 1, 33

## K

### key

center select button 32

end 1, 15, 16, 33

5-way navigation 1, 32, 33

left soft key 1, 28, 33, 81

menu 1, 33, 34

power 1, 14

right soft key 1, 28, 33, 81

send 1, 15, 16, 62

smart 1, 46, 47

voice 1

volume control 1, 15

### keypad

answering calls 55

volume, setting 80

## L

language, setting 81

### left soft key

functions 1, 28, 33

personalizing 81

light ID, setting 79

line, changing 59

- location indicator 28, 31
- lock
  - application 89
  - phone 49
  - SIM card 89
- Low Battery message 31

## M

- making a call 15
- master clear 82
- master reset 81
- menu
  - entering text 36
  - icons, changing in home screen 81
  - icons, converting to text 80
  - icons, described 27
  - icons, showing or hiding 81
  - language, setting 81
  - lists 35
  - navigating 33
  - personalizing 80
  - rearranging features 80
  - using features 35
  - view, changing 80
- menu indicator 27
- menu key 1, 33, 34

- message
  - chat 76
  - menu feature icon 27
  - MMS template 74
  - MMS, defined 19
  - multimedia letter 74
  - multimedia message 74
  - reading 74
  - text 74
- message indicator 28, 31
- message waiting indicator 21
- messages menu feature icon 27
- messaging presence indicator 28, 30
- micro-browser
  - browser setup 89
  - Java applications 90
  - menu feature icon 27
  - using 89
  - Web sessions 89
- missed call indicator 64
- Missed Calls message 47, 64
- MMS template 74
- MMS. *See* message
- More Here* guide 8
- MotoMixer 91
- multimedia letter, sending 74

- multimedia message
  - receiving 21
  - sending 3, 19, 74
- multimedia messaging service. *See* message
- my telephone number 16, 53, 72

## N

- network settings 87
- notepad 65
- number
  - storing your number 53
  - viewing your number 16, 72
- numbers, entering 44

## O

- 1-touch dial
  - setting preference 79
  - using 66
- open to answer 55
- optional accessory, defined 9
- optional feature, defined 9

## P

- passwords. *See* codes
- phone
  - active line indicator 30
  - active line, changing 59
  - alert, turning off 15, 61
  - answer options 55
  - clear stored information 82
  - codes 48
  - date, setting 53
  - flip 16, 25
  - keypad, answering calls 55
  - language, setting 81
  - locking 49
  - network settings 87
  - reset all options 81
  - ring style 15, 46, 54, 80
  - security code 48
  - time, setting 53
  - turning on/off 14
  - unlock code 48
  - unlocking 14, 49, 50
- phone number
  - active line indicator 30
  - active line, changing 59
  - adding digits after 64
  - attaching 2 numbers 64, 65

- phone number (continued)
  - international access code 62
  - redialing 59
  - storing in phonebook 77
  - storing your number 53
  - viewing your number 16, 72
- phone theme 90
- phonebook
  - attaching 2 numbers 64, 65
  - category views 52, 78
  - copying entries 79
  - dialing a number 77
  - entry category 78
  - group mailing list 77
  - light ID 79
  - menu feature icon 27
  - 1-touch dial 66
  - picture ID 3, 18, 52, 60, 78
  - primary number, setting 79
  - ringer ID 77, 80
  - sorting entries 52, 79
  - speed dial number 66
  - storing an entry 77
  - voice dialing 77

- photo
  - downloading 74, 89
  - picture ID 3, 18, 52, 60, 78
  - sending 2, 17
  - taking 2, 17
- picture
  - downloading 74, 89
  - screen saver 57
  - viewing 90
  - wallpaper 56
- picture ID 3, 18, 52, 60, 78
- PIN code
  - changing 48
  - entering 89
- PIN2 code, changing 48
- power key 1, 14
- predictive text entry 42
- primary text entry method 37

## **Q**

- quick dial 82

## **R**

- received calls list 62
- recent calls 62
- recent calls menu feature icon 27

- redial
  - automatic redial 60
  - busy number 59
- reference guide 8
- right soft key
  - functions 1, 28, 33
  - personalizing 81
- ring lights 3, 24
- ring style indicators 28, 31
- ring style, setting 15, 46, 54, 80
- ring tone
  - creating 91
  - downloading 74, 89
  - editing with MotoMixer 91
  - managing 90
- ringer ID
  - setting 77
  - turning on/off 80
- ringer volume, setting 15, 80
- roam indicator 28, 30
- S**
- screen saver 57
- secondary text entry
  - method 37
- security code
  - changing 48
  - default 48
  - forgetting 51
- send key 1, 15, 16, 62
- service dial 82
- shortcuts 72, 81
- Show ID feature 63
- signal strength indicator 28, 29
- silent alert indicator 31
- silent alert, setting 15, 46, 54, 80
- SIM Blocked message 14, 89
- SIM card
  - defined 9
  - installing 9
  - locking 89
  - PIN code entry 14
  - PIN code, changing 48
  - PIN2 code, changing 48
  - precautions 10
  - SIM Blocked message 14, 89
- SIM PIN code
  - changing 48
  - entering 89
- SIM PIN2 code, changing 48
- smart key 46, 47
  - illustration 1
- soft keys
  - functions 28, 33
  - illustration 1

- soft keys (continued)
  - labels 27
  - personalizing 81
- sound
  - creating 91
  - downloading 74, 89
  - managing 90
- Speaker On message 48
- speakerphone
  - activating 84
  - automatic answer 84
- speed dial 66
- standby time, increasing 57, 58
- storing a call 62
- symbol chart 45
- symbols, entering 44

## T

- talk then fax call 64
- tap method text entry 38
- telephone number
  - storing your number 53
  - viewing your number 16, 72
- text
  - capitalization, changing 38
  - character chart 41
  - entering 36

- entry method, selecting 37
- entry method, setup 37
- flashing cursor 36
- iTAP software predictive text entry 42
- numeric method 44
- symbol chart 45
- symbol method 44
- tap method 38
- text case indicator 38
- text entry method
  - selecting 37
  - setup 37
- text entry method indicator 31, 38
- theme 90
- time, setting 53
- timers 83, 84
- transfer a call 69
- transmission indicator 29
- travel charger 13
- TTY device 73

## U

- unlock
  - application 89
  - phone 49



unlock code

bypassing 50

changing 48

default 48, 49, 50

entering 14, 49, 50

forgetting 50

## V

vibrate alert

setting 15, 46, 54, 80

turning off 15, 61

video clip

downloading 74, 89

managing 91

playing 3, 22

vObject, defined 22

voice dial 77, 84

voice key

dialing a number 77

illustration 1

voice record 88

voicemail 66

voicemail message indicator

31, 67

volume

earpiece 15

keypad 80

ringer 15, 80

volume keys 1, 15

## W

wallpaper 56

Web pages 89

Web sessions 89





***MOTOROLA***

***IMPORTANT SAFETY AND LEGAL  
INFORMATION>***

## **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

# ***Contents***

---

<b>Safety and General Information . . . . .</b>	<b>4</b>
<b>FDA Consumer Information on Wireless Phones . . . . .</b>	<b>10</b>
<b>Product Registration . . . . .</b>	<b>20</b>
<b>RF Energy Interference . . . . .</b>	<b>20</b>
<b>Export Law Assurances. . . . .</b>	<b>20</b>
<b>Wireless: The New Recyclable . . . . .</b>	<b>21</b>
<b>Wireless Phone Safety Tips . . . . .</b>	<b>23</b>

# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.  
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user's guides published prior to December 1, 2002.

## ***Exposure To Radio Frequency (RF) Energy***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## ***Operational Precautions***

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

### ***External Antenna Care***

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

## ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

## ***Body-Worn Operation***

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

## ***Approved Accessories***

Use of accessories not approved by Motorola, including but not limited to batteries and antennas, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at [www.Motorola.com](http://www.Motorola.com).

## ***RF Energy Interference/Compatibility***

**Note:** Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

## ***Facilities***

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

## ***Medical Devices***

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.



## ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website: [www.Motorola.com/callsmart](http://www.Motorola.com/callsmart).

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

### ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.






## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.

## ***Batteries***

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

## ***Seizures/Blackouts***

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing

video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

## ***Repetitive Motion Injuries***

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

# **FDA Consumer Information on Wireless Phones**

---



The U.S. Food and Drug Administration (FDA) provides consumer information on wireless phones at:

<http://www.fda.gov/cellphones/qa.html>

Following are safety-related questions and answers discussed at this web site.

## ***Do wireless phones pose a health hazard?***

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

## ***What is FDA's role concerning the safety of wireless phones?***

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio

frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

## ***What is FDA doing to find out more about the possible health effects of wireless phone RF?***

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## ***What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?***

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## ***What about children using wireless phones?***

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly

precautionary; it was not based on scientific evidence that any health hazard exists.

## ***Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?***

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

## ***Do wireless phone accessories that claim to shield the head from RF radiation work?***

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) *charged two companies* that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.



# ***Motorola Limited Warranty for the United States and Canada***

---

## ***What Does this Warranty Cover?***

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

## ***Products and Accessories***

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Products and Accessories</b> as defined above, unless otherwise provided for below.	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
<b>Decorative Accessories and Cases.</b> Decorative covers, bezels, PhoneWrap™ covers and cases.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Monaural Headsets.</b> Ear buds and boom headsets that transmit mono sound through a wired connection.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Consumer and Professional Two-Way Radio Accessories.</b>	<b>Ninety (90) days</b> from the date of purchase by the first consumer purchaser of the product.
<b>Products and Accessories that are Repaired or Replaced.</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## ***Exclusions***

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

**Use of Non-Motorola Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

## **Software**

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Software.</b> Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	<b>Ninety (90) days</b> from the date of purchase.

## **Exclusions**

**Software Embodied in Physical Media.** No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

**Software NOT Embodied in Physical Media.** Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

## **Who is Covered?**

This warranty extends only to the first consumer purchaser, and is not transferable.

## ***What Will Motorola Do?***

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

## ***How to Obtain Warranty Service or Other Information***

USA	<b>Phones</b> 1-800-331-6456 Pagers 1-800-548-9954 <b>Two-Way Radios and Messaging Devices</b> 1-800-353-2729
Canada	<b>All Products</b> 1-800-461-4575
TTY	<b>TTY</b> 1-888-390-6456
For <b>Accessories</b> and <b>Software</b> , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

## ***What Other Limitations Are There?***

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A

PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

**Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.**

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

## ***Product Registration***

---

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

## ***RF Energy Interference***

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ***Export Law Assurances***

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

## ***Wireless: The New Recyclable***

---

Your wireless phone can be recycled. Recycling your wireless phone reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their phones and have taken steps to promote the collection and environmentally sound recycling of end-of-life wireless devices.

As a wireless phone user, you have an important role in ensuring that this phone is recycled properly. When it comes time to give this phone up or trade it in for a new one, please remember that the phone, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices in the United States, including information on where to recycle wireless devices near you, please visit [www.recyclewirelessphones.com](http://www.recyclewirelessphones.com).







**MOTOROLA**

# ***Wireless Phone Safety Tips***

*"Safety is your most important call!"*


**Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.**

**When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:**

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.



- 2 **When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.
- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.

- 
- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.\*
- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.\*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

\* Wherever wireless phone service is available.

**Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.**



For more information,  
please call  
1-888-901-SAFE  
or visit the  
CTIA Web site at  
[www.wow-com.com](http://www.wow-com.com)<sup>TM</sup>





**motorola.com**